

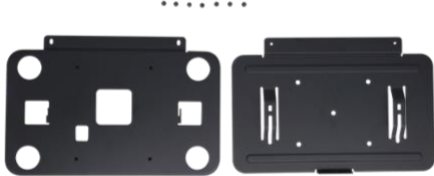
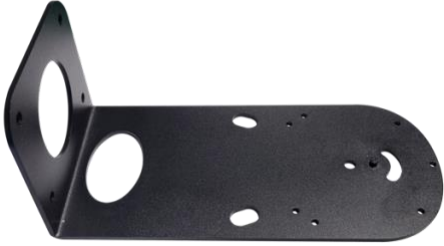
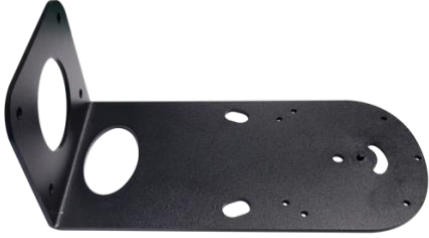
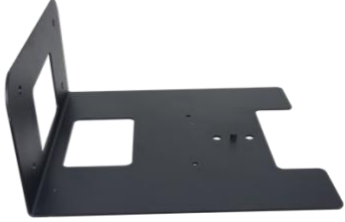


| Ceiling-mount Bracket | iMount C1 | iMount C2 | iMount C3 |
|-----------------------|---|--|---|
| Picture |  |  |  |
| For iCam | iCam P10, P12U, P13/P13N | iCam P20/ P20N | iCam P30/ P30N |

| Wall-mount Bracket | iMount W1 | iMount W2 | iMount W3 |
|--------------------|--|---|--|
| Picture |  |  |  |
| For iCam | iCam P10, P12U, P13/P13N | iCam P20/ P20N | iCam P30/ P30N |